

Parts List



Ax16



Bx16



Cx16



Dx1




Ex4



Fx4

1

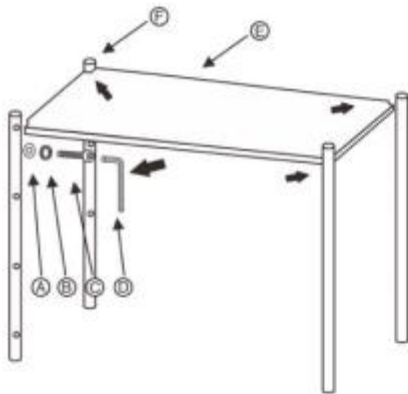

2

