




# Working Table Operating Instruction

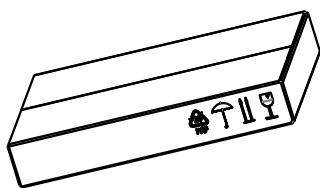


1.Choose the model according to the size needed.

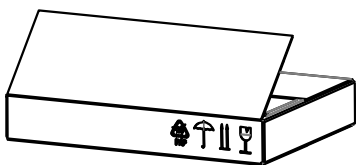


2.Open the package;

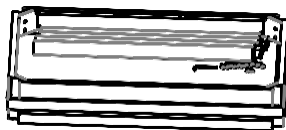


3.Take out the spare parts carefully;

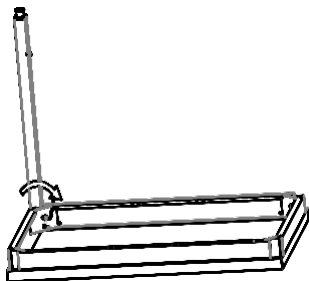


4. Insert the legs into the mounting holes;

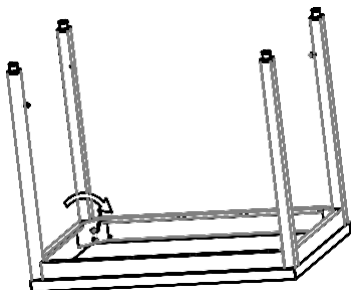


5. Clockwise tighten the screws using screwdriver;

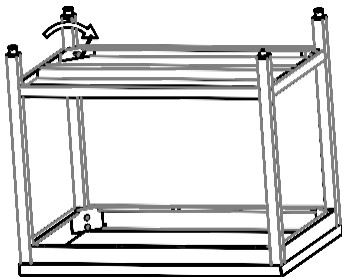


6, Assemble the under plate using screwdriver clockwise ;

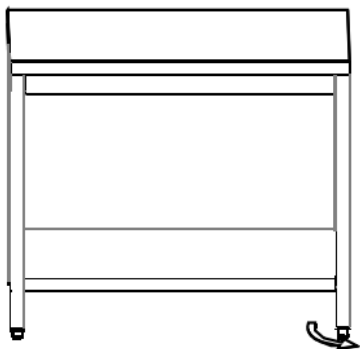

7. Adjust the feet;

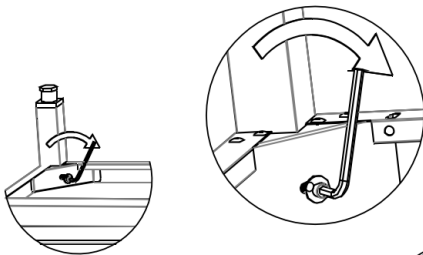

Detailed drawing of installing screw.

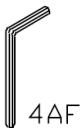

4AF